

EN

KARAG




bathroom experience...

www.karag.it

WALKIN 3
(SPS 3)







INSTALLATION MANUAL

Tools needed

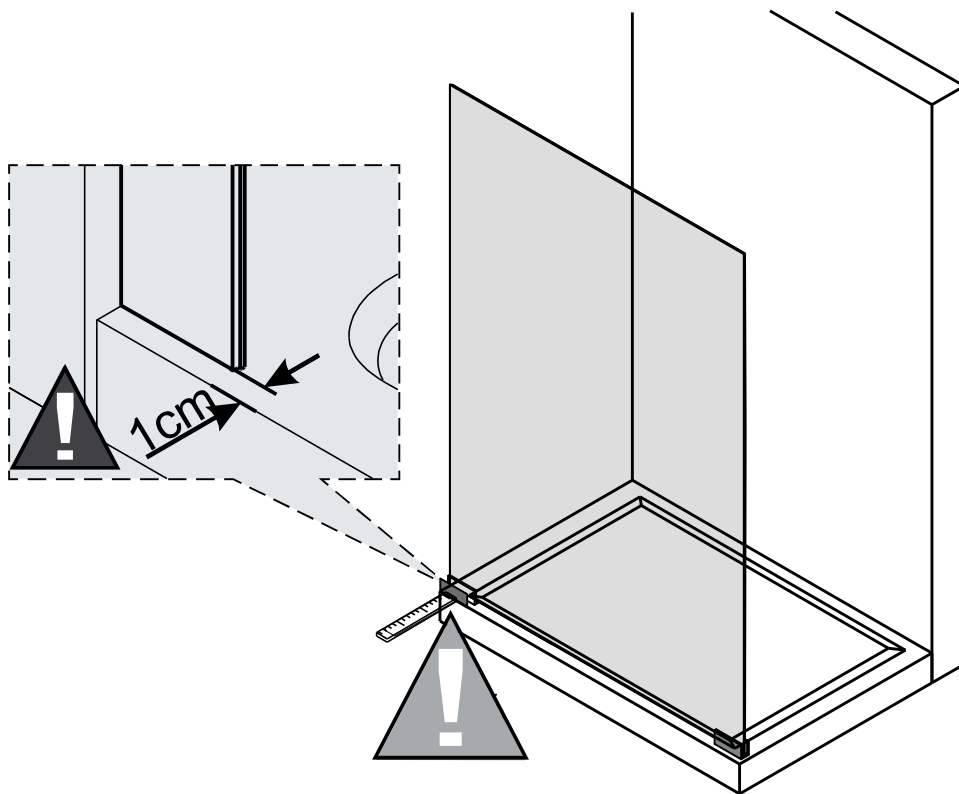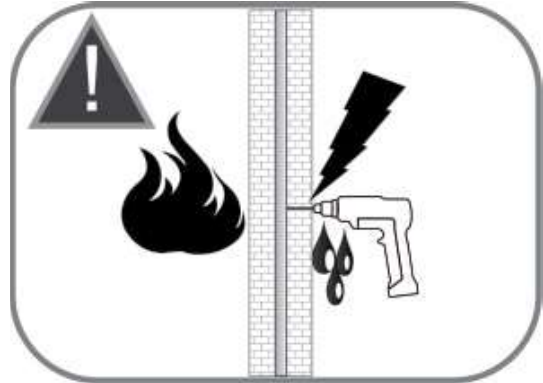
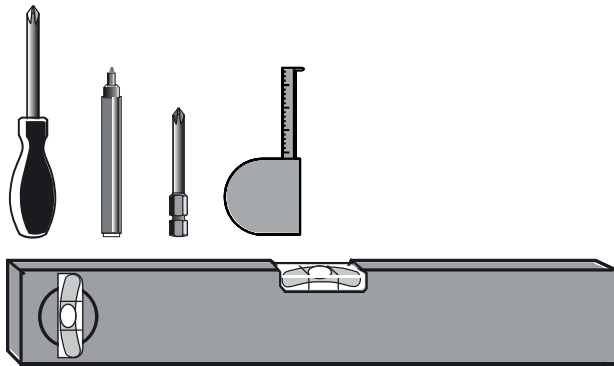


- Install the seal rubber on the down side of the glass, so the rubber will be between the glass and the tray.

KARAG is not responsible for any spelling or typographical mistakes.

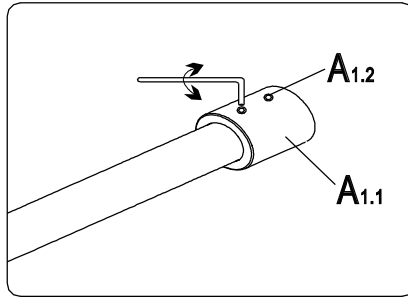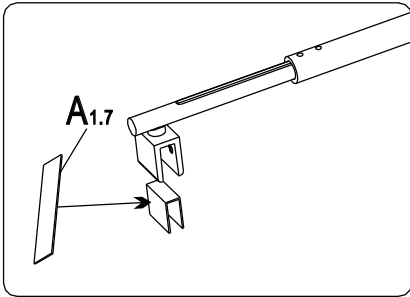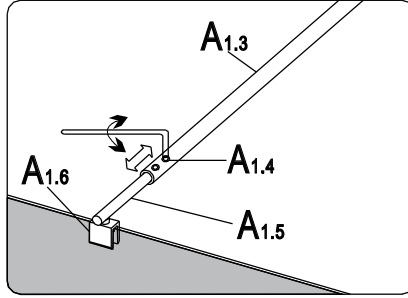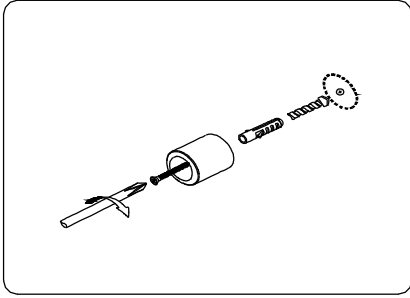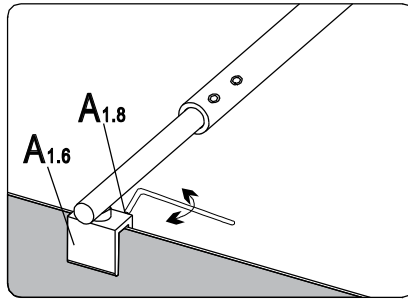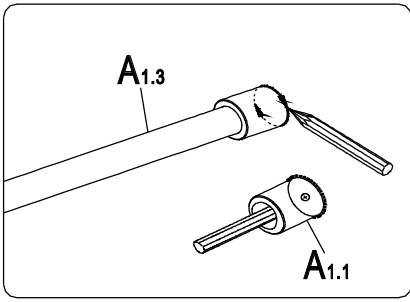

► Install the brackets

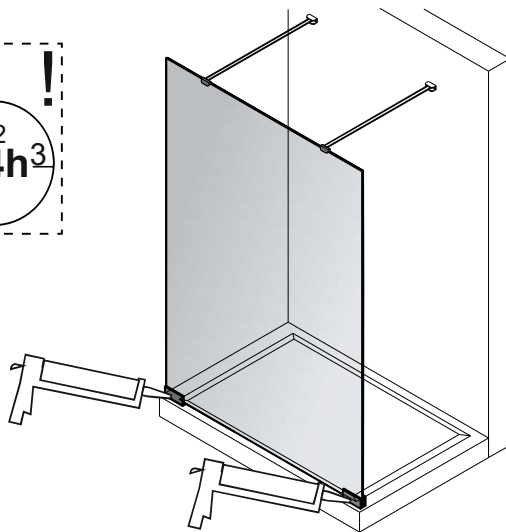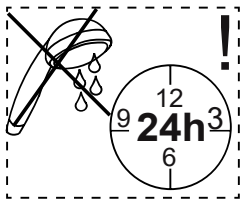

KARAG Italia Srl
 7, 25 Aprile street
 41 042 FIORANO MODENESE (MO)
 ITALIA
 (+30) 0039 0536 921230
 info@karag.it / www.karag.it