


KARAG

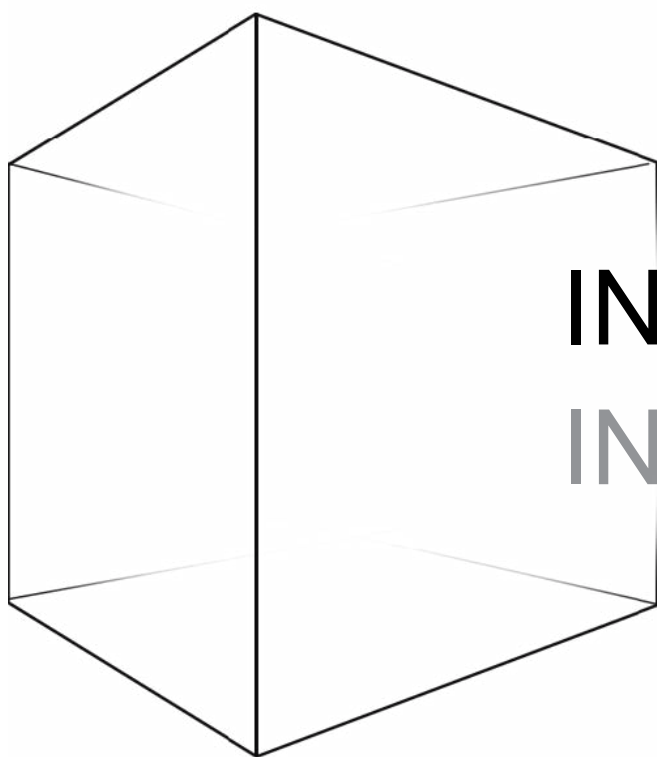


INSTALLATION INSTRUCTIONS

PILLE


I. INSTALLATION PREPARATION



- Do not allow any sharp objects to come in contact with the cabinet, as it will scratch the surface
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Please avoid using cleaning products that contain bleach or ammonia.
- Wood surface should only be cleaned with wood care products such as soapy water or furniture polish.
- Mirrors are fragile. When handling or installing mirrors, please prevent them from colliding with hard objects. When leaning against the wall, the mirror should be slightly tilted and perpendicular to the wall. It must be placed on a cushion or soft cloth on the ground to avoid bumping the corners.

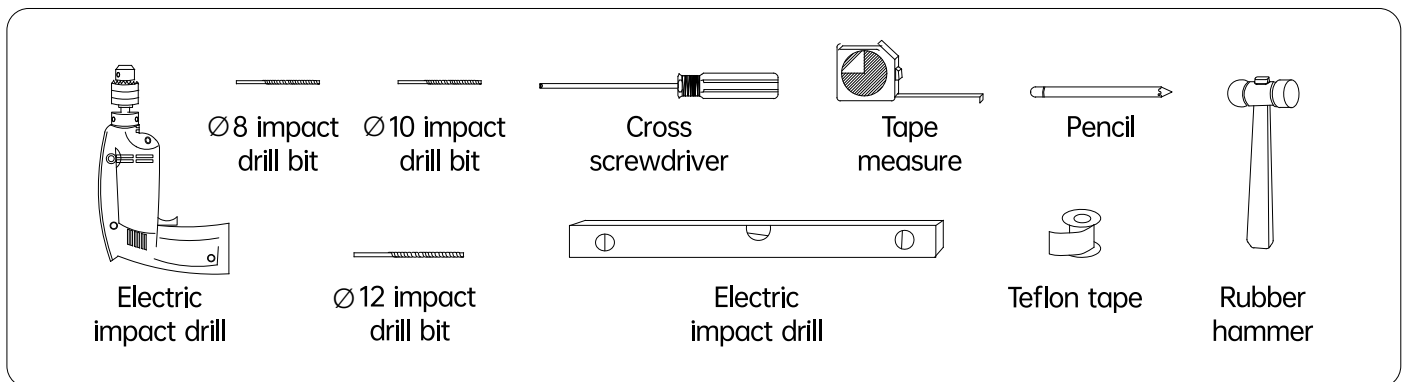

III. PRODUCT OVERALL

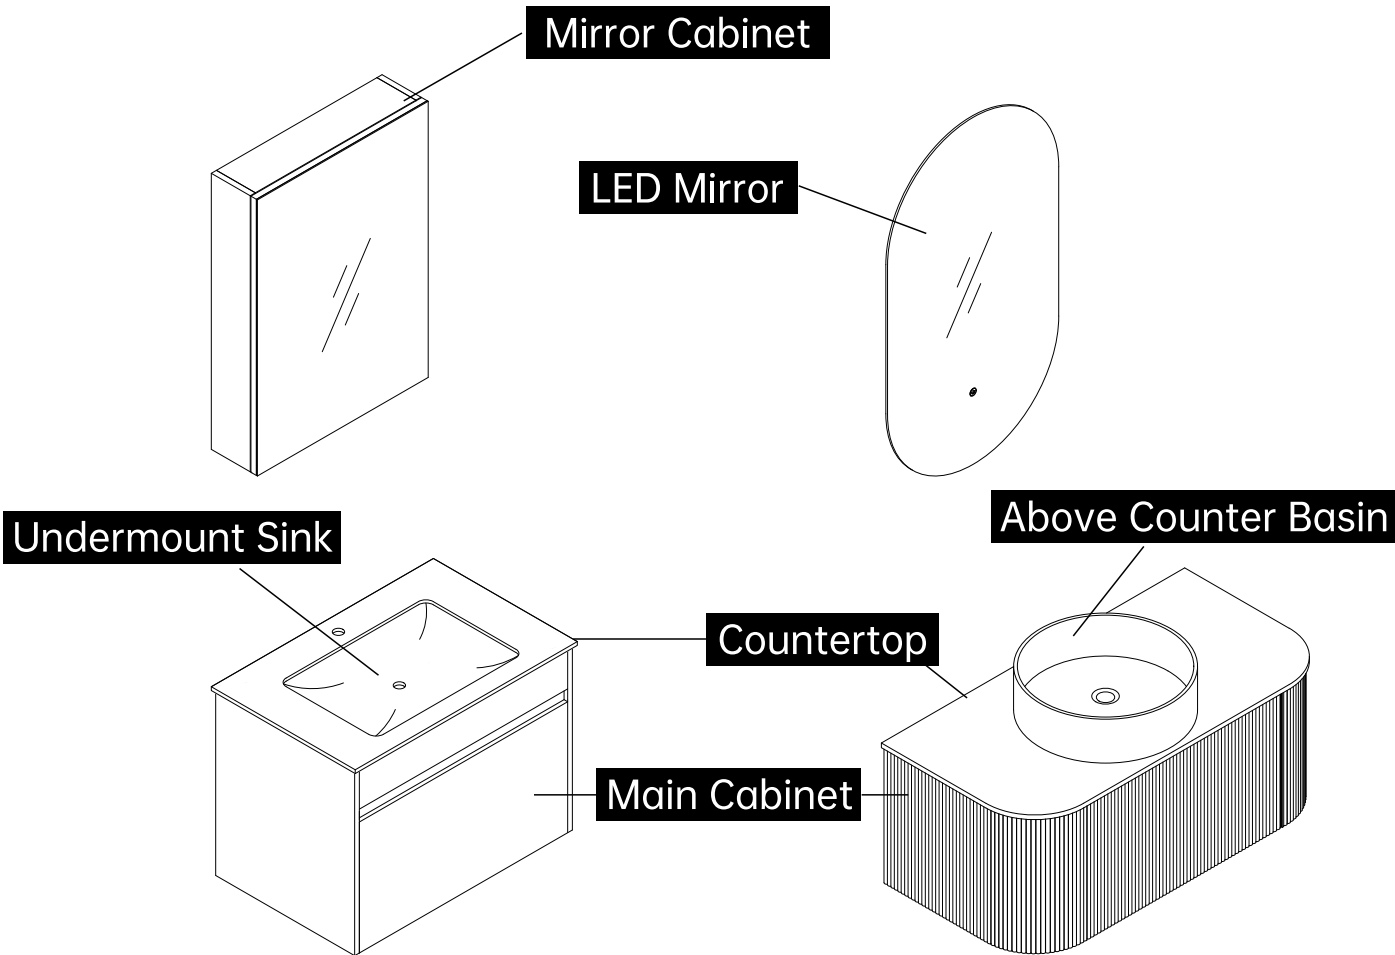

No.	Accessory Name	Picture	No.	Accessory Name	Picture
1	Plastic particle (M8/M10)		4	Hexagonal tapping screws	
2	Stainless steel countersunk head tapping screws		5	Cover cap+washer	
3	Plastic particle (M12)		6	Foam pad	

III. INSTALLATION STEPS (MAIN CABINET)




1. To fix the main cabinet against the wall

1.1 Mark the hanging holes position on the wall

1.2 drill $\varnothing 12$ hole according to the number of holes in the back brace of main cabinet.

1.3 Inset the M12 plastic particles in the

1.4 Tighten the main cabinet on the wall with hexagonal tapping screws (8*80)

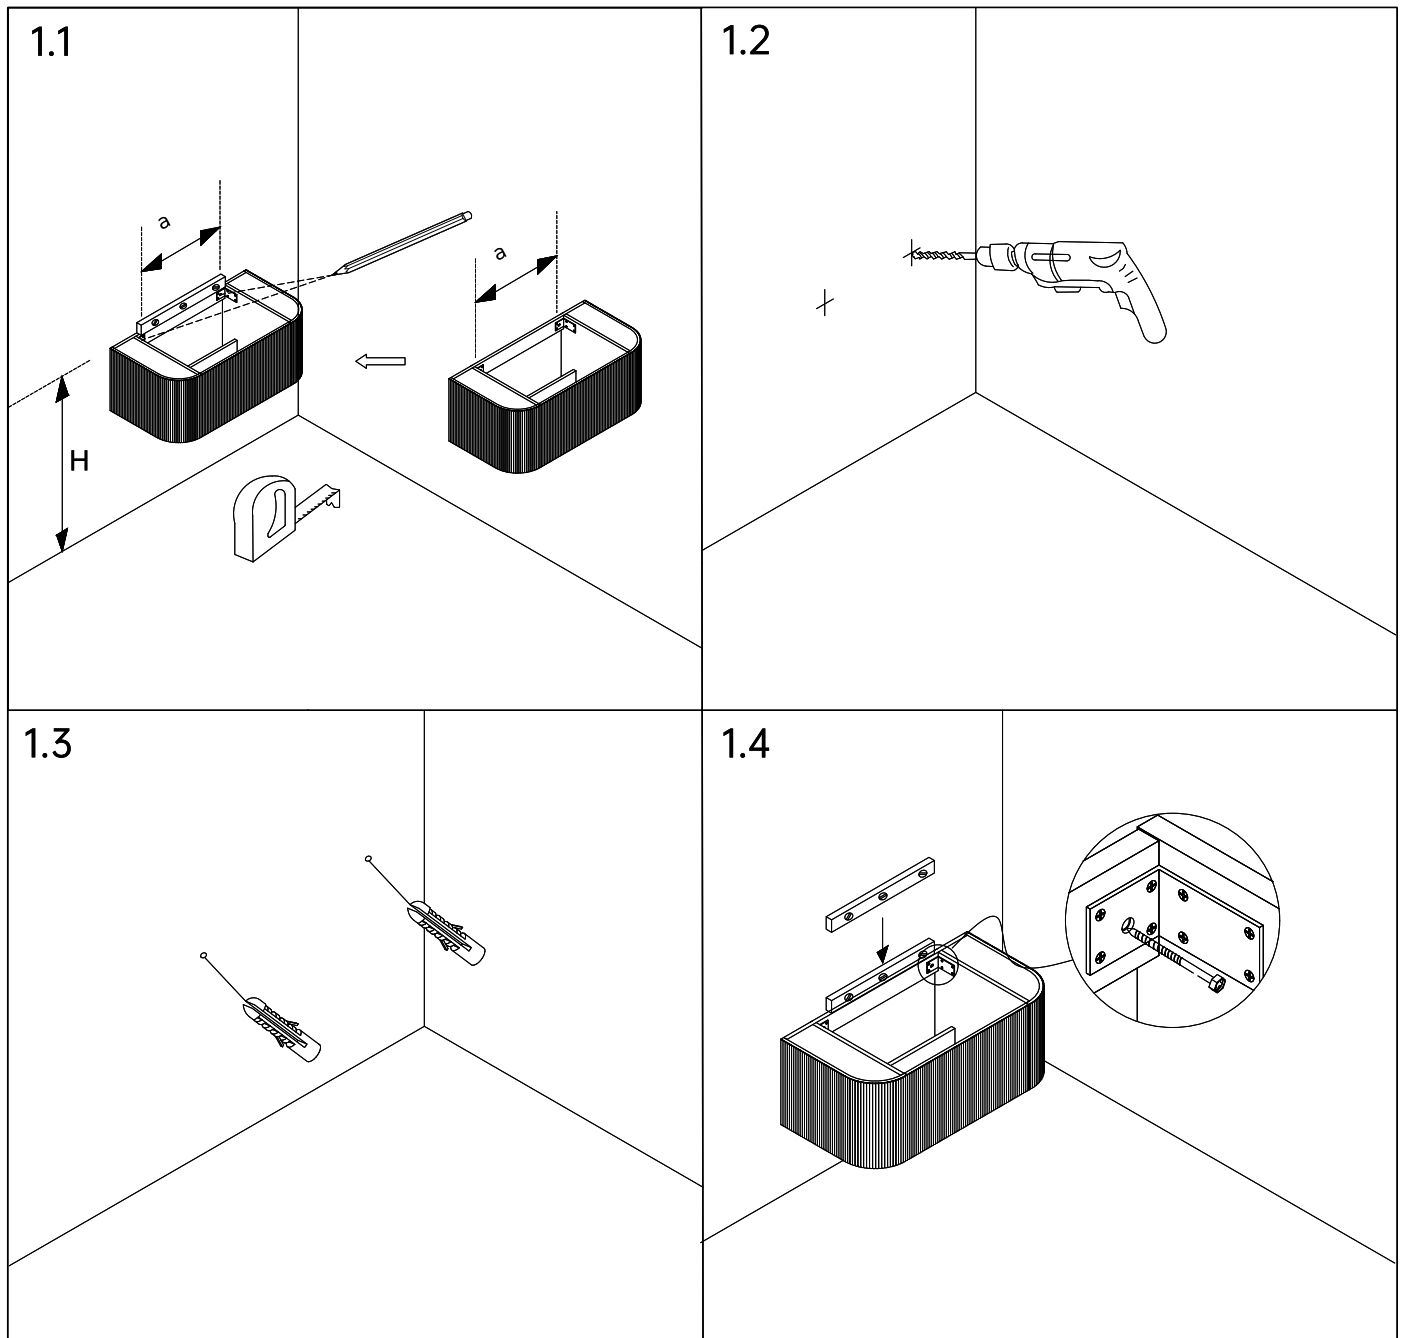


III. INSTALLATION STEPS (COUNTERTOP)



Countertop Type 1

To fix the countertop:


1. Put the countertop on the cabinet if the countertop is not level, you can put to foam pad on the cabinet to ensure that the countertop is level.
2. Apply a proper amount of silicon sealant to the countertop against the wall to fix the countertop.

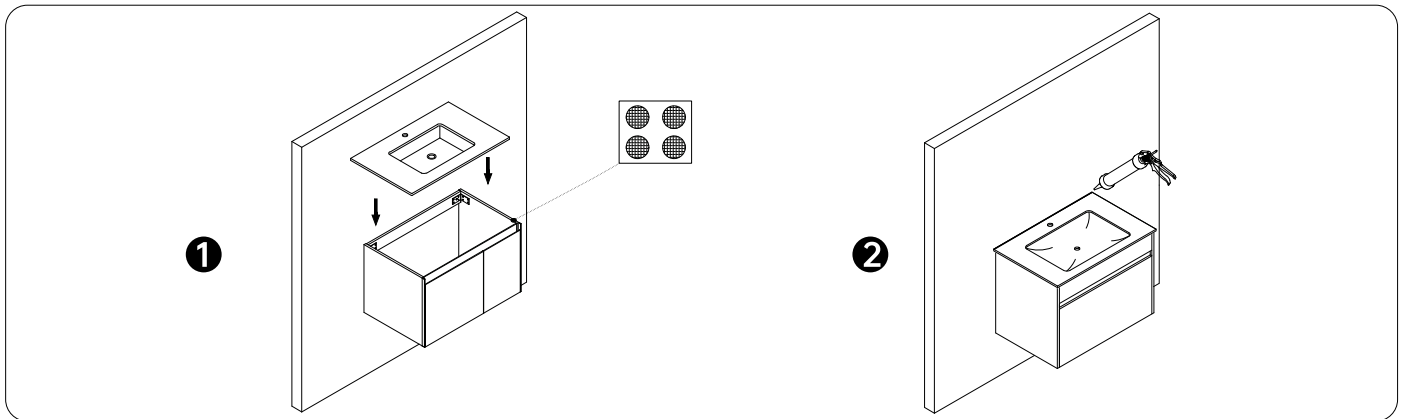

Countertop Type 2

To fix the countertop:


1. Put the countertop on the cabinet if the countertop is not level, you can put to foam pad on the cabinet to ensure that the countertop is level.
2. Apply a proper amount of silicon sealant to the countertop against the wall to fix the countertop.
3. Apply a proper amount of silicon sealant around the basin cutout on the countertop, and then place the basin on the countertop.

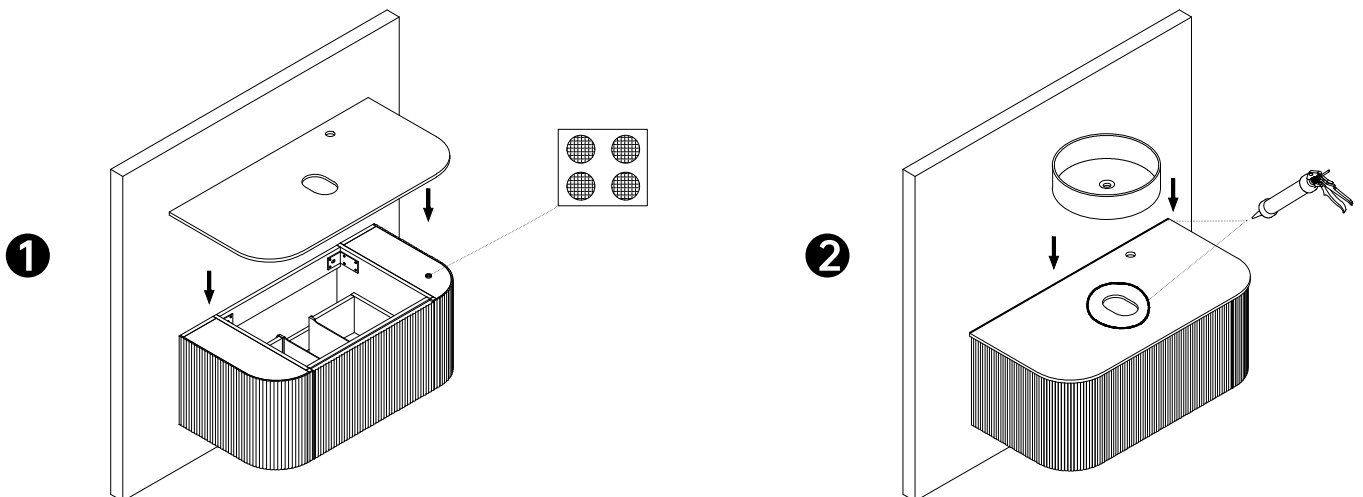


III. INSTALLATION STEPS (MIRROR CABINET)




- 4.1 Measure the drilling position and horizontal mark position of the mirror cabinet on the wall. Drill Ø10 holes in the wall with a hammer drill
- 4.2 Insert M10 plastic particles into the hole
- 4.3 Secure the mirror cabinet to the wall, tighten the screws with a screwdriver, and tighten the cover

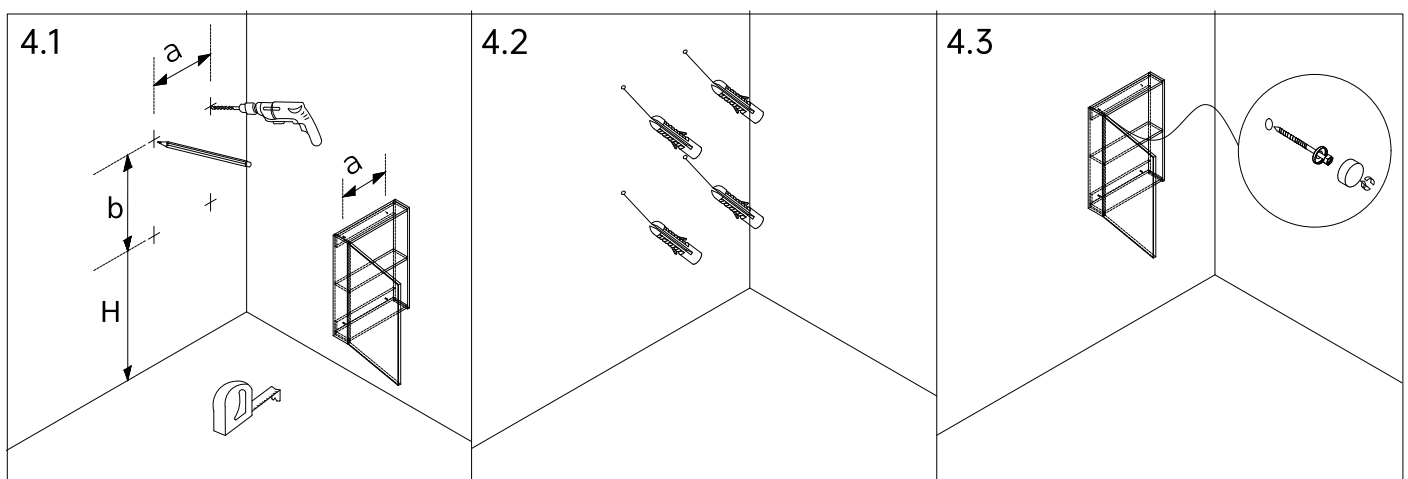

MIRROR 600

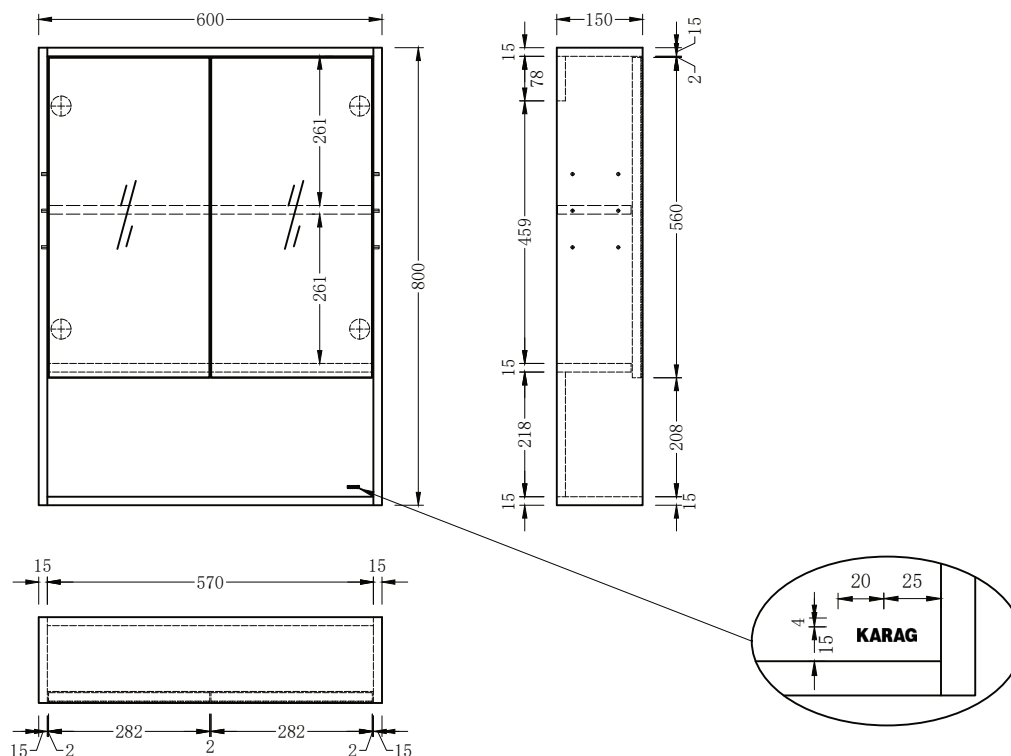


MIRROR 750

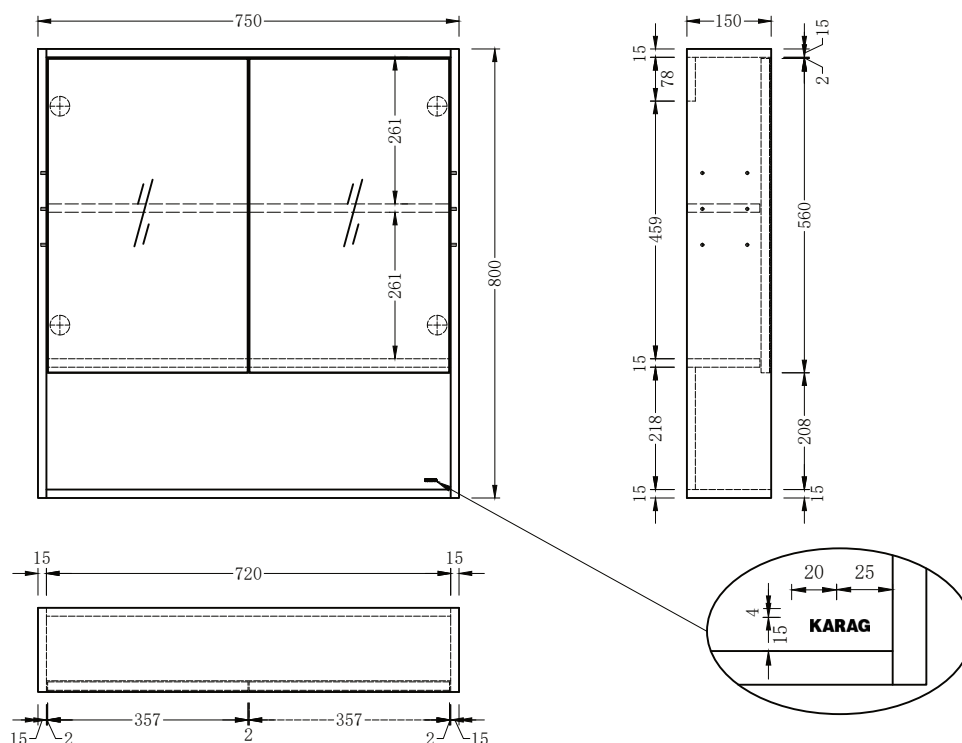


KARAG ITALIA S.R.L

Via della Scienza 8, 41051 Castelnovo Rangone (MO), Italy
tel. +39 0595 332125 | info@karag.it


MIRROR 1000

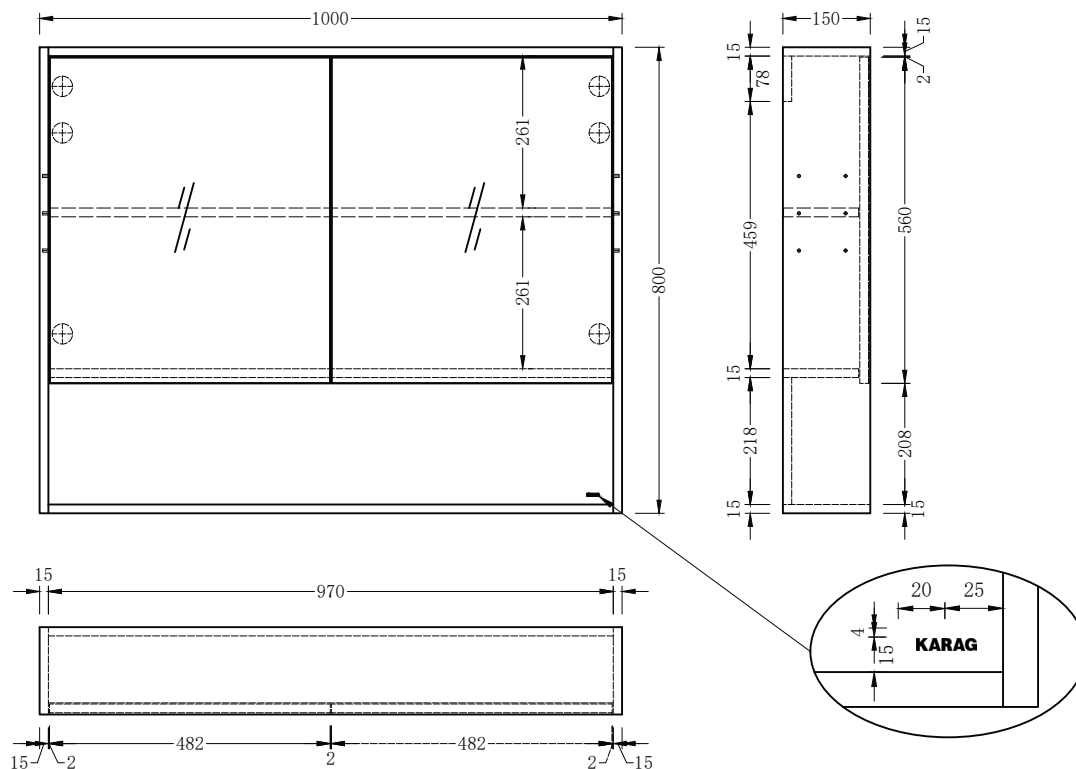


MIRROR 1200

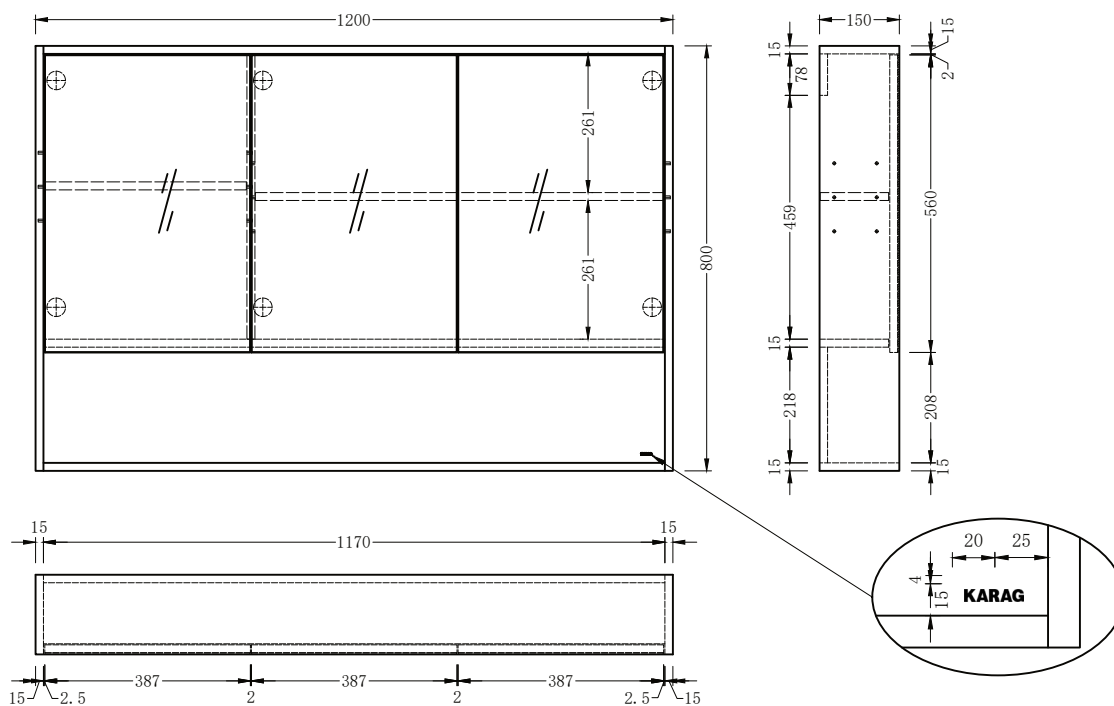

PILLE 800

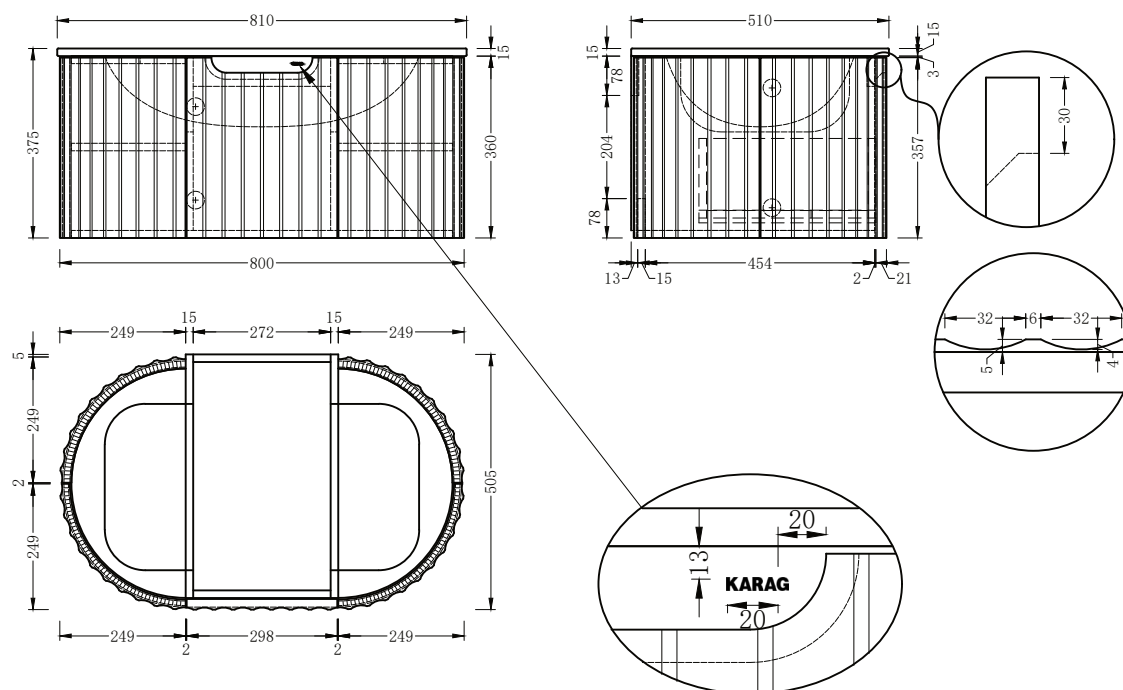

PILLE 1000

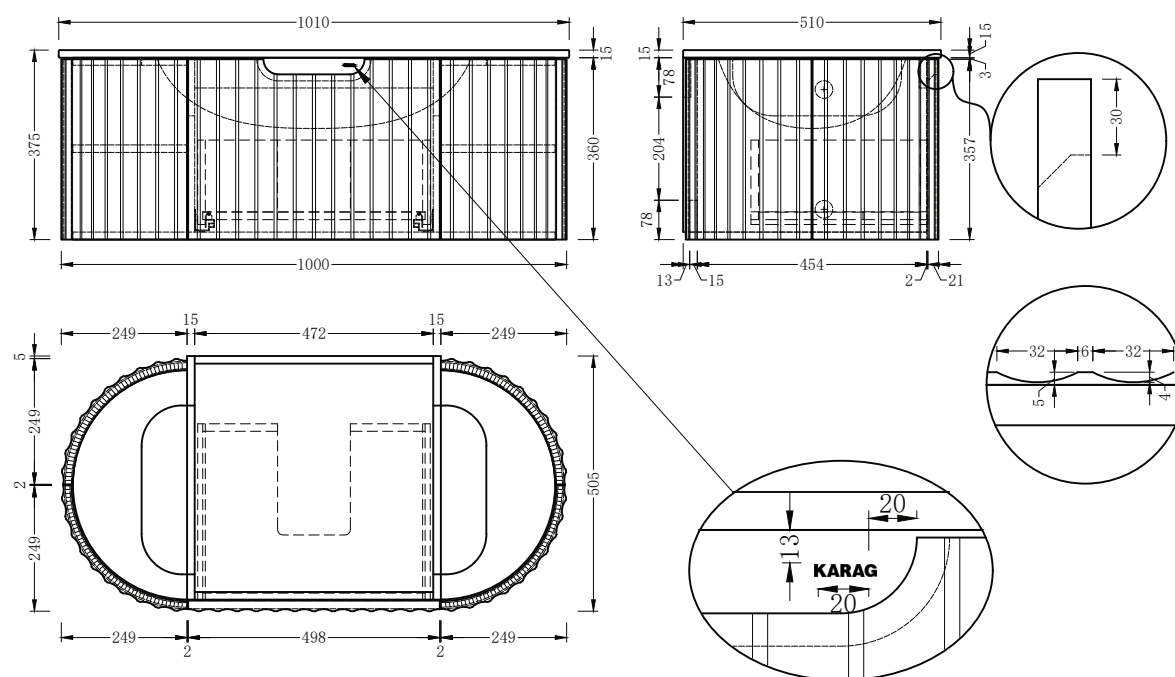

KARAG ITALIA S.R.L

Via della Scienza 8, 41051 Castelnovo Rangone (MO), Italy
tel. +39 0595 332125 | info@karag.it

PILLE 1200

